

Installation Instructions for: ACCESSORIES:



TOWEL RING:

1) Drill 5/16" hole into drywall. Insert plastic sleeve so it is flush. Put the 1/4" screw far enough in so the ring body fits snugly against wall.

2) Remove ring body and apply a good dab of silicone on the back side of the body and reinstall on screw. Let set for eight hours.




Towel Ring

TOILET PAPER HOLDER:

1) Drill 2-5/16" holes into drywall to line up with the keyhole notches on the back of the holder. (Insert plastic sleeve so it is flush.) Put 2-1/4" screws far enough in so the holder fits snugly against the wall.

2) Remove the holder and apply silicone on the back and reinstall. Let set for eight hours.

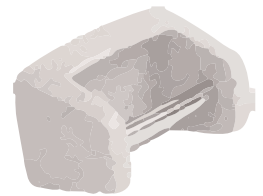

Toilet Paper Holder

