

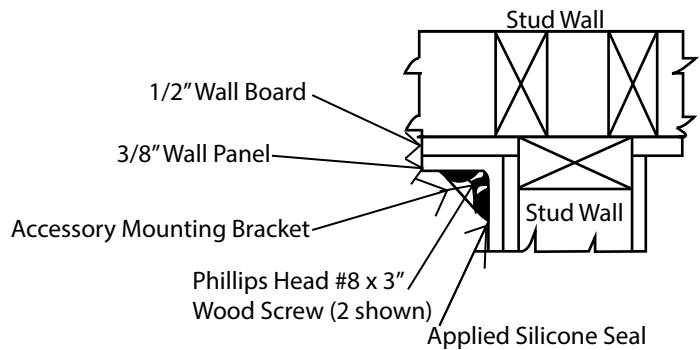
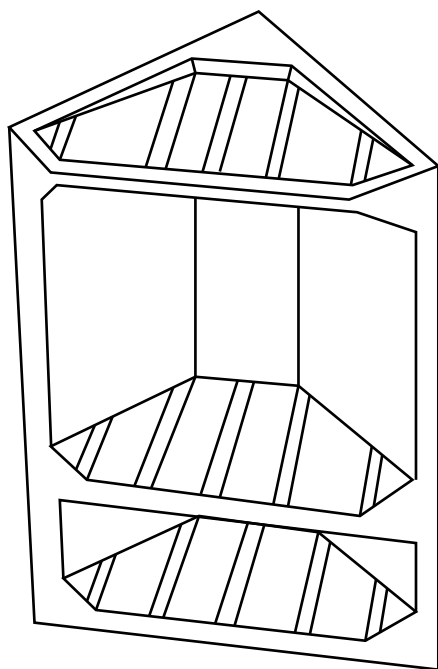


Installation Instructions for: CORNER SOAP & CADDY

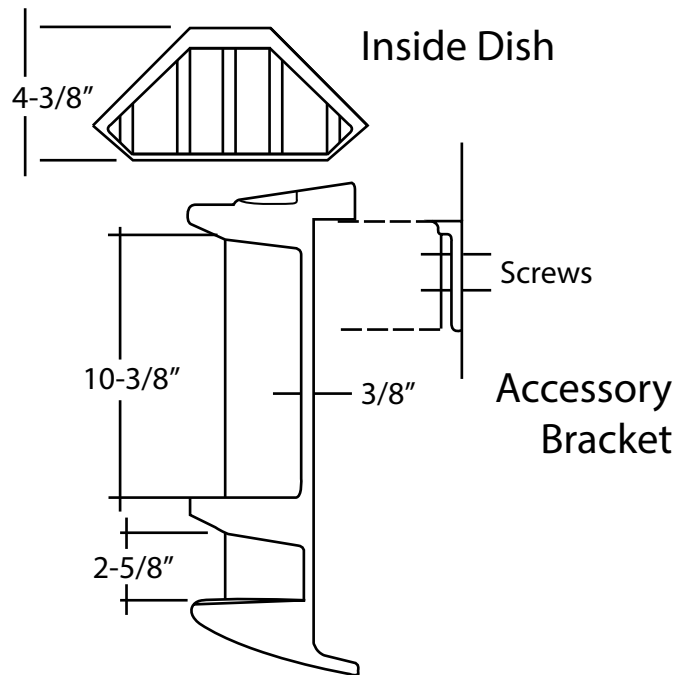

To Install:
Screw mounting bracket to wall.
Run 3 beads of silicone down each side of caddy.
Mount caddy to bracket and seal with silicone.

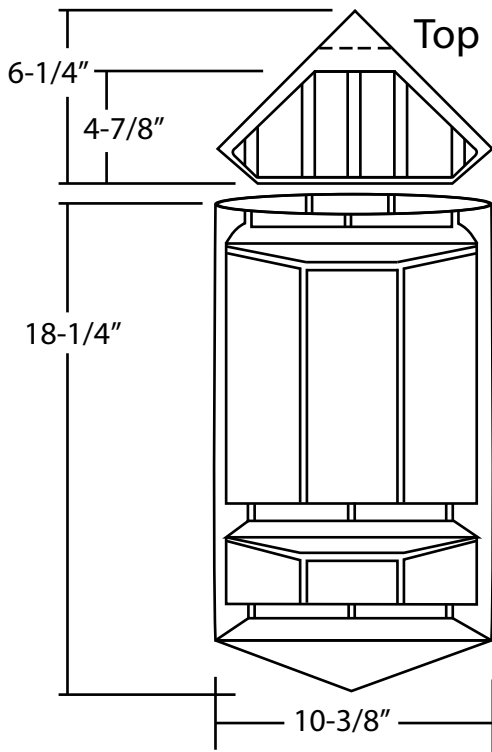