


Installation Instructions for: TRIM AND MOLDINGS



(WARRANTY WILL NOT APPLY IF THESE INSTRUCTIONS ARE NOT FOLLOWED)

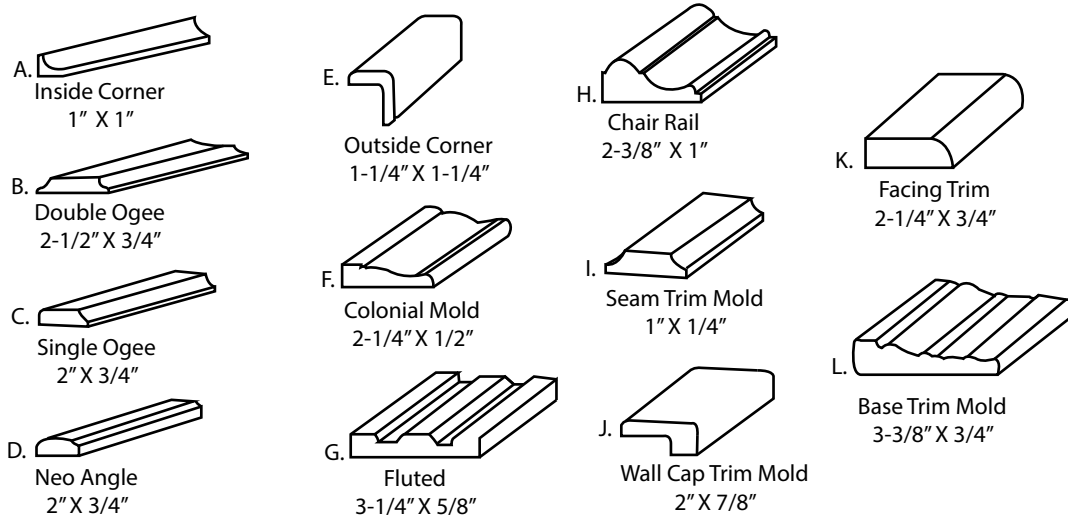

Solid cast moldings should be fastened in place with adhesive. Construction or panel adhesive, apoxies, contact cement or silicone can be used. The backside of moldings should be wiped clean with acetone, lacquer thinner or other fast drying solvents to assure proper adhesion. The wall surface should be free of dust. To hold molding in place while adhesive sets, you may use spots of hot glue, strips of masking tape or wooden braces. It is recommended to use clear silicone when installing Onyx or Alabaster because of its translucent characteristics, dark adhesives may show.

**MOLDINGS CAN BE EASILY CUT USING A MASONRY BLADE
IN YOUR SAW OR HACK SAW.**

